How To Order Part Number
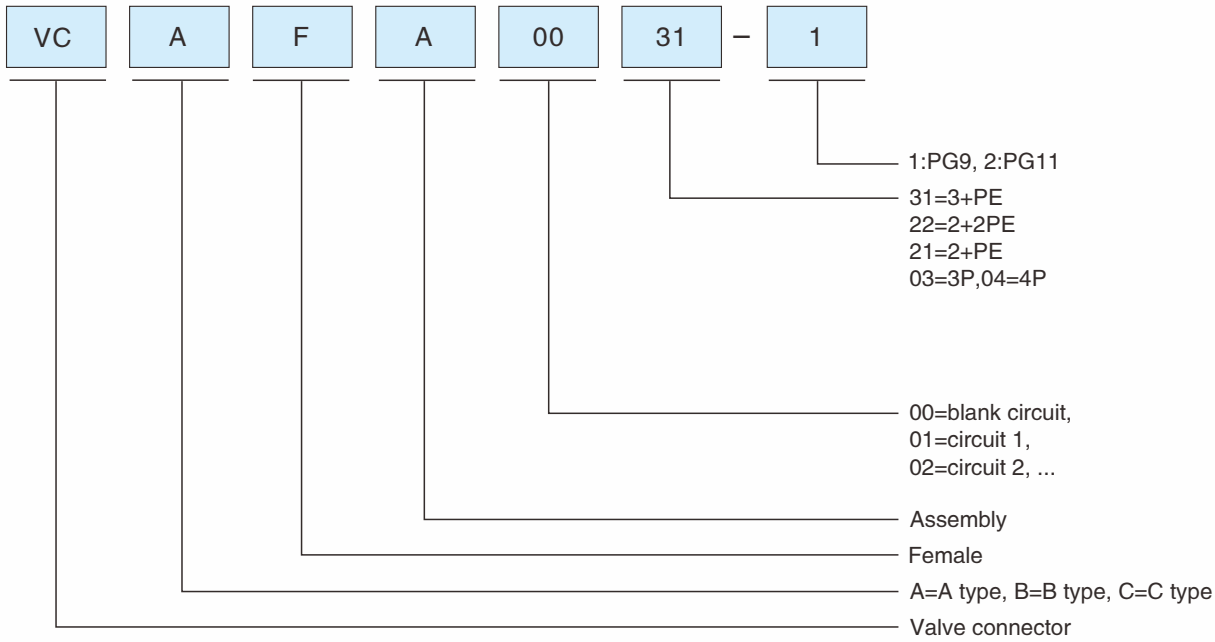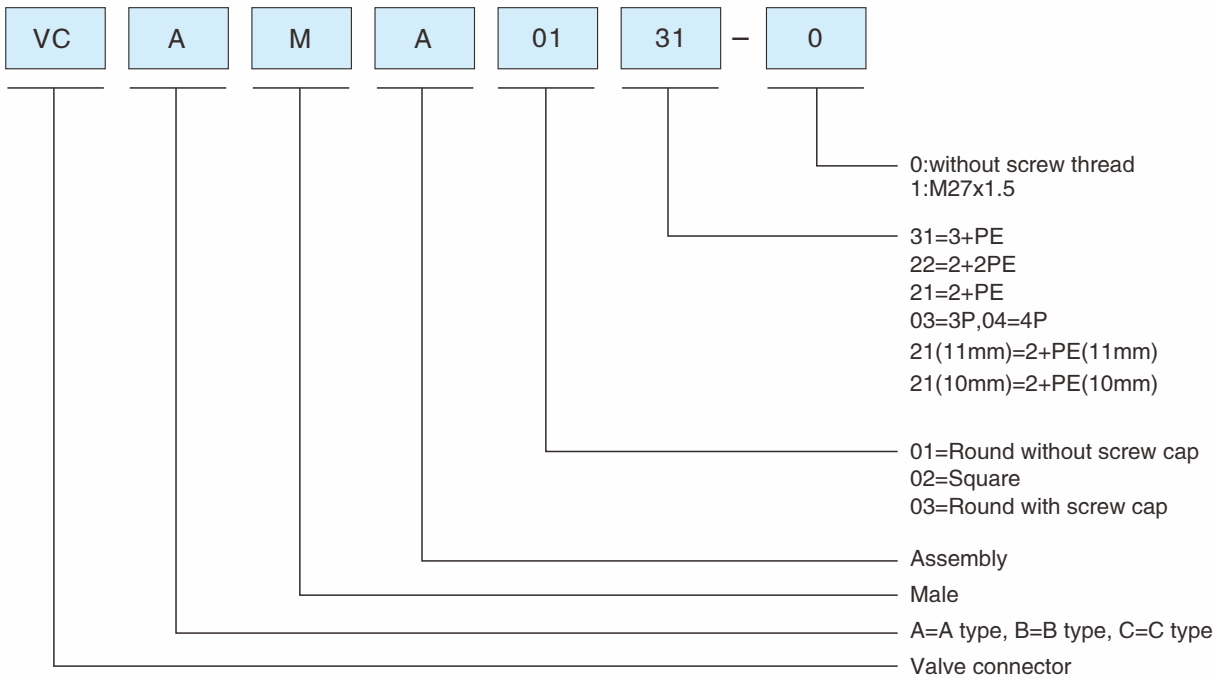
Valve / Solenoid Connectors